

# Bluetooth Speaker WiFi camera



**User Manual**  
**V 5.0**

We thank you for purchasing our product.

Make sure you read this user manual before using the camera. Reading this manual will help you learn to use the camera properly.

Store this guide safely so that you can use it in the future.

# Instruction


- When you connect this camera via your router using your smartphone, tablet, or iPad, you can remotely monitor your home or shop from anywhere. The camera can work without an SD card. It can monitor your room, warehouse, shop, or even your nanny, for the safety of your property and family.




- **Lens left/right Rotation:** This is a 1080P HD hidden spy camera, with a Bluetooth wireless speaker; the speaker and the camera can be used simultaneously.

It supports the camera lens left and right rotation through 150 degrees. Use the App to control the lens on the camera, which will rotate, giving the camera a wider field of view, and nobody will figure out that it is a camera.



 The speaker and recording a video can be used simultaneously, but the speaker and the eccam App cannot be used at the same time. When you open eccam to view, the speaker will be interrupted.

- The camera supports a memory card up to 128GB SD memory card (not included). It can be set for motion detection recording, 24-hour recording, and time-lapse video recording. It also supports circular recording, so that when the SD card is full, it will automatically overwrite old videos, and you do not have to worry about the capacity of the memory card. You can view videos through the App. You have to use the SD card reader to download all videos.

 You can only view Real-time recording in the eccam App. In addition, the alarm videos for motion detection will be saved in eccam.

- When the camera senses movement, it will notify you through the phone App and will automatically take a picture and save it in the photo album within the App. You can also set the motion detection to record video, which will be automatically recorded onto the SD card.
- The camera can be activated or turned off via the App. The camera includes a cable and power adapter, and a 3000 mAh large-capacity battery.

## Precautions before use

1. Please try to keep the camera and the router within 33 feet (10 meters) from each other to ensure that the WiFi signal is good, so as not to cause the WiFi signal to be unstable and cause the camera to stop.
2. Please use this product's power adapter or an alternative power adapter 5V/2A correctly, do not use high-voltage power supplies.
3. Please insert the battery in the camera before the first use, and connect the power supply to charge, to avoid the low battery power from affecting the settings and use.



- The battery is a backup battery to keep the camera working when the power suddenly blackouts. We do not promise the working time of the battery. We strongly suggest you keep the USB power on all the time.
4. This product is an electronic product and contains a Lithium-Ion battery. Keep away it from water, fire, or high-temperature environment.

5. Please use a genuine C10 (Speed class 10) micro SD card.

 
 Class 10 = 10 MB/s



6. The user must abide by local laws and regulations, and use the camera legally. It is strictly forbidden to use this product for illegal purposes.

## Package Contents

- (A)** 1 \* Bluetooth stereo speaker Camera
- (B)** 1 \* USB Cable
- (C)** 1 \* This manual
- (D)** 1 \* Micro SD card reader
- (E)** 1 \* USB AC wall charger (Adapter)

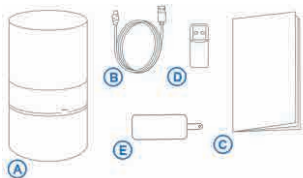

## Product structure



## Product Specifications

<b>Model number</b>	Y8
<b>Pixels</b>	5 million CMOS
<b>Resolution</b>	1080P
<b>Video format</b>	MP4
<b>Number of frames</b>	25
<b>View Angle</b>	240°
<b>Motion detection shooting distance</b>	6 meters in a straight line
<b>Minimum illumination</b>	1 LUX
<b>Continuous recording time</b>	Above 24 hours
<b>Compression format</b>	H.265
<b>Recording range</b>	5m <sup>2</sup>
<b>Power consumption</b>	260mA/5V
<b>Storage temperature</b>	-20-80°C



<b>Operating temperature</b>	-10-60°C
<b>Operating humidity</b>	5-85%RH
<b>Type of memory card</b>	TF card
<b>Maximum capacity of memory card</b>	128GB
<b>Play software</b>	Media Player And other player
<b>Battery</b>	Lithium-Ion 3000mAh; 3.7V; 11Wh
<b>Charging voltage</b>	DC 5V
<b>Battery charging time:</b>	5-6 hours
<b>Recording last time:</b>	5-6 hours on a full charge
<b>Mobile phone operating system</b>	Android/iOS
<b>Wi-Fi</b>	Supports 2.4G and 5G
<b>Maximum devices</b>	8

## Prepare the battery and install the memory card

Take out the camera from the package. Open the battery cover and remove the battery insulation sheet.

Take out



Insert the SD memory card and turn the WiFi camera switch to "ON".



Insert the SD memory card

Switch to "ON"

Close the battery cover. Plug in the power adapter and USB power cord to charge the battery of the camera. The red light (charging indicator light) will be on.

After 15 seconds, the yellow light will be on (camera start indicator), then it will flash and a beep will be heard. The camera is waiting now for the connection setting.



Red & yellow light.

## Bluetooth speaker connection settings

1. Press the power switch of the Bluetooth speaker to turn on the Bluetooth speaker. The voice "Bluetooth" is broadcast, the blue indicator light is on.




Speaker power switch

 
 
 


Speaker blue light

2. Enter your mobile phone system settings interface. Click to enter the Bluetooth interface settings. Turn on the Bluetooth switch.
3. Look into the "available devices" and search for "Bluetooth music" device.

 If you do not see it, try to "Refresh" (located at the bottom of your screen).

Click on the "Bluetooth music" device and the phone will ask if you want to pair with the device. Click on the Pair button.

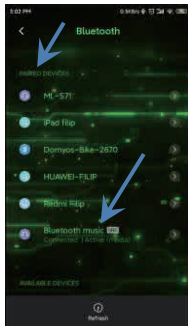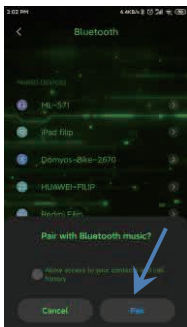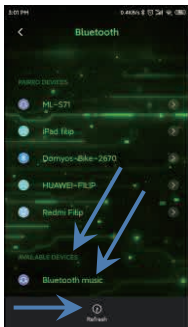

After a successful pairing, the “Bluetooth music” device will appear in the paired devices list and the blue indicator light on the speaker flashes.

## What you can do about Bluetooth pairing failures:



### **1. Make sure Bluetooth is turned on.**

You should see the little Bluetooth symbol at the top right of the screen if you have an Android device. For iOS, you'll need to go into the settings to enable and disable Bluetooth.

### **2. Make sure the two devices are in close enough proximity to one another.**

### **3. Power the devices off and back on.**

A soft reset sometimes can resolve an issue. With phones, an easy way to do this is by going into and out of airplane mode.

### **4. Remove old Bluetooth connections.**

If you're having trouble pairing your phone with the speaker, it could be because the speaker is trying to connect with another phone, laptop, or tablet. In iOS settings, you can remove a device by tapping on its name and then "Forget this Device". In Android settings, tap on a device's name, then "Unpair".

## **5. Charge up both devices you're trying to pair.**

Some devices have smart power management that may turn off Bluetooth if the battery level is too low. If your phone or tablet isn't pairing, make sure it and the device you're trying to pair with have enough juice.

## **6. Delete a device from a phone and rediscover it.**

If your phone sees a device but isn't receiving data from it, sometimes it helps to start from scratch. In iOS settings, you can remove a device by tapping on its name and then "Forget this Device". In Android settings, tap on a device's name, and then "Unpair".

## **7. Clear the Bluetooth cache.**


Sometimes apps will interfere with Bluetooth operation and clearing the cache can solve the problem.

# Installing the app

 
 
 
 
Download the eccam from APP Store or Google Play. The eccam App connects your camera to your Android or iOS mobile device ensuring you are always connected to what matters most. To get the App, search for "eccam" in the Google Play or App Store and download it.

You can also use your mobile to scan the QR-Code to download the "eccam" App.

Note: If you download the APP for the first time and there is a timeout and no network, please find the eccam App in the phone settings menu, click to open, and authorize the App to use WLAN & cellular data.

 please click "agree" [user agreement and privacy policy] and allow the eccam app to access your pictures and video, or it may lead to fail to connect to wifi.



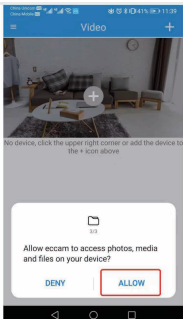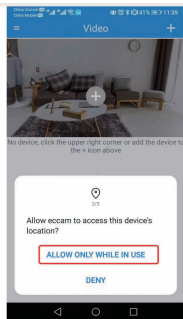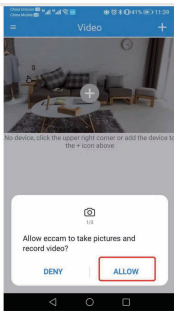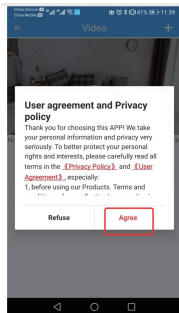

Please understand the display screenshot may be a little different depend on different phone models.

## Camera connection setting

- 1.For IOS users,please refer directly to Page 17
- 2.For Android users,please refer directly to Page 24

### For IOS users camera connection setting



 
IOS





When you can't find the APP in the mall,  
please scan this QR code to download it.

- 1.Plug in the power adapter and turn on the camera. After 40 seconds, you heard "di" sound,Press the "R" button on the back of the camera.
- 2.After about 10 seconds,the blue light begin to flash.
- 3.About 5 seconds later, You will hear two "DI DI" in a row. It is ready to connect.
- 4.Open the "eccam" App,it will need you to "allow eccam to send you notifications."



**Note: Make sure your phone has connected to your home WiFi before camera connection settings.**

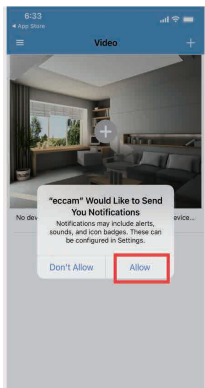

 
 
5.click “+” and choose “Configure WIFI to add device”

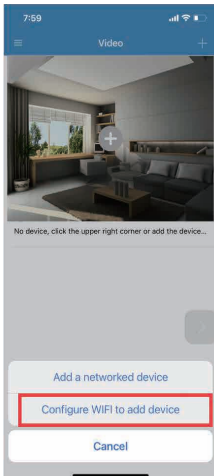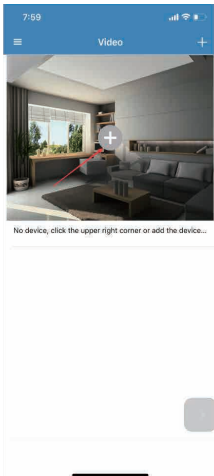

 
 
6. Please Click "Allow while using app" and "next" to access to the next step.

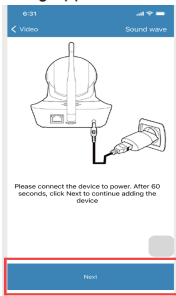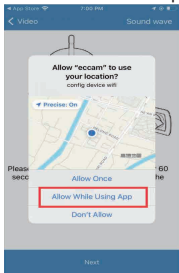

  7. Continue to click "Next" and then it will go access to setting menu.

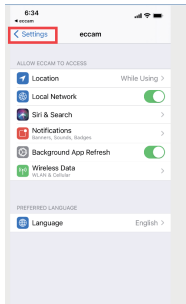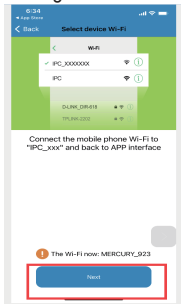

  
8. Open the "WLAN" menu, find the camera of the IPC\_\*\*\*\* - \*\*\*\*\* , and click on the connection, Maybe it will prompt "Unable to join the network" . please click "OK" and try to connect again. When the connection is successful, click on the upper left corner button "eccam" to return to the APP interface.

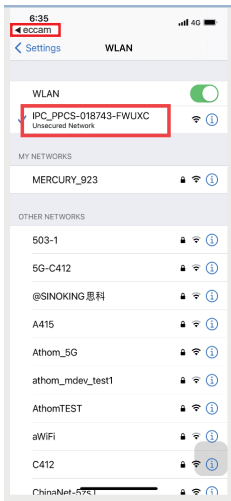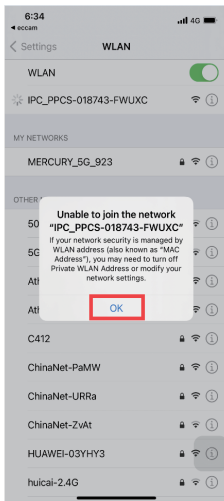

9.Go back to eccam APP and enter your home WIFI and password and then Config.



 10. Bind it successfully. Then you should already see a screen with the view of the camera.

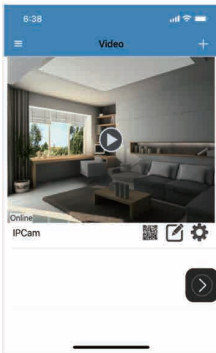

Note: The old password is: admin. Default password is insecurity, you had better modify it. You can edit your new password in "security code".

You can give the camera a name.

**⚠️ If it fails to connect after 120 seconds, please double check the wifi password you are entering is correct.**

**A: if the password is incorrect, please press "R" button to reset it and try to connect it once again.**

**B: if the password is correct, please exit APP and access to WLAN menu to switch manual to your home wifi. Then access back to run eccam.**



⚠ If you see no picture or a black image (instead of the view of the camera), or you have no service, click then directly on the picture to load the image.

⚠ Do not use VPN software while using the eccam App. There is a possibility that the camera remains offline due to the VPN. Close your VPN.

## For Android users camera connection setting



 
Android




When you can't find the APP in the mall,  
please scan this QR code to download it.

1. Plug in the power adapter and turn on the camera.. After 40 seconds, you heard "di" sound, Press the "R" button on the back of the camera.
2. After about 10 seconds, the blue light begin to flash.
3. About 5 seconds later, You will hear two "DI DI" in a row. It is ready to connect.
4. Open the "eccam" App, it will need you to "allow eccam to send you notifications."


**Note: Make sure your phone has connected to your home WiFi before camera connection settings.**


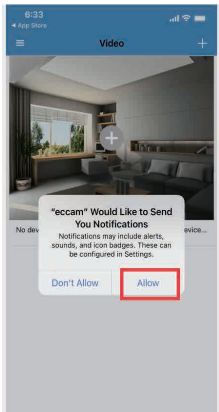


## 5.click “+” and choose “Configure WIFI to add device”

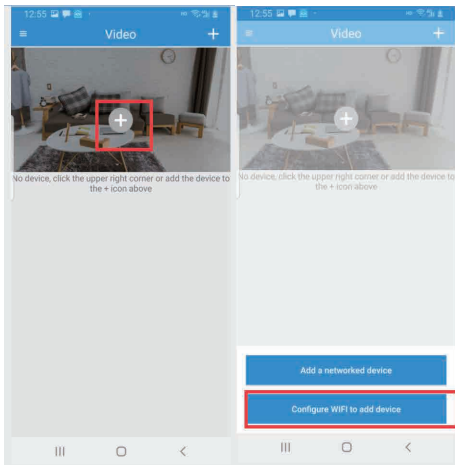 

   6. Click “Next” and “Open” the permissions settings to allow eccam to use its location.

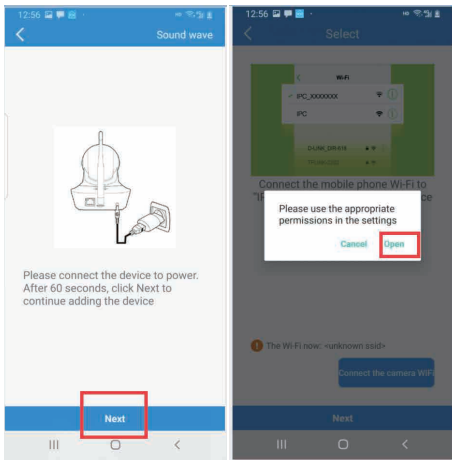


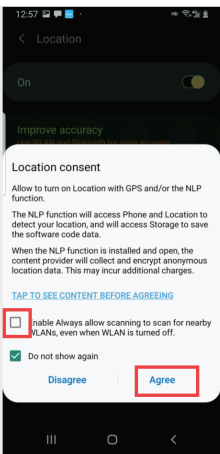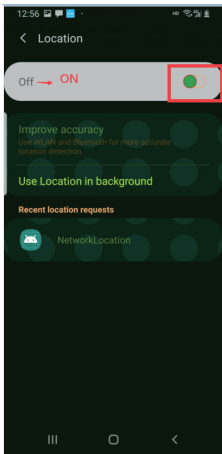


7. Then access back to eccam APP and continue camera connection.

Here the wifi now is your home wifi name and please access to next step by clicking "connect the camera wifi".

 
**Note:** if the wifi name here is not your home wifi, please double check your wifi menu and make sure your phone has connected to your home wifi since the incorrect wifi will lead to fail to connect.

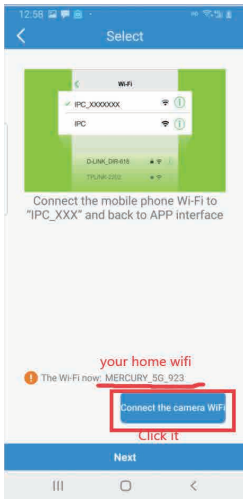

 8. Find the camera of the IPC\_\*\*\*\*\*, and click on the connection,  
 Maybe it will prompt "the internet may not be available".  
 Please ignore this tip and access back to eccam APP.

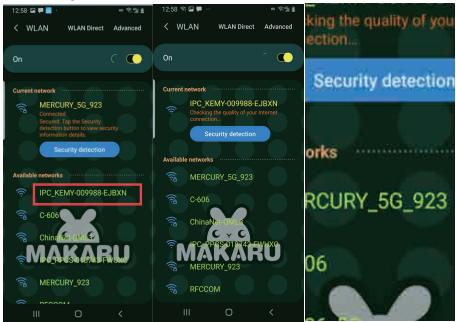


 **NOTE:** Someone whose phone model is belongs to Motorola, Huawei etc may encounter to the below prompt after connecting the camera wifi. Please click "yes" firstly and then access to next step. If you click "no" here, it may cause to fail to connect.



9. Access to next step.

 Note: the wifi name here will be camera wifi that begins with IPC.

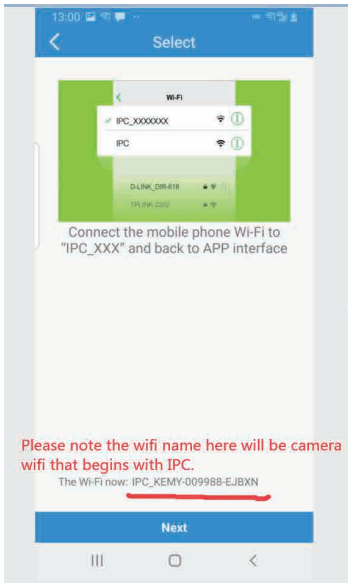




10. Click any area on the screen and access to enter your password of home wifi.



 Connect successfully.

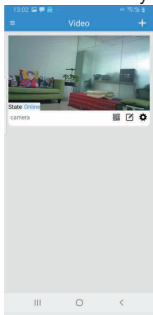


**⚠** If it fails to connect after 120 seconds, please double check the wifi password you are entering is correct.


A: if the password is incorrect, please press "R" button to reset it and try to connect it once again.

B: if the password is correct, please exit APP and access to WLAN menu to switch manual to your home wifi. Then access back to run eccam.

Note: The old password is: admin. Default password is insecurity,you had better modify it.You can edit your new password in “security code”.

You can give the camera a name.

 If you see no picture or a black image (instead of the view of the camera), or you have no service, click then directly on the picture to load the image.

 Do not use VPN software while using the eccam App. There is a possibility that the camera remains offline due to the VPN. Close your VPN.

## Using the camera with the eccam app

### Important notes:

 
 
- All instructions and guidelines mentioned in this chapter are based on the eccam App version 1.0.2.
- Only commonly used features are explained to be able to use the camera. This is not an eccam App user manual.







# The Home menu

## Device sharing


You can share this camera with other people. Click on the setting icon and then you will see a QR code. Others can scan it to share this camera.

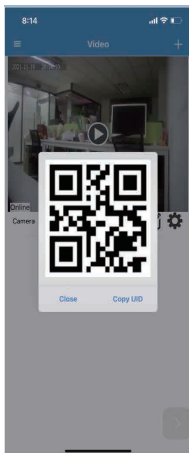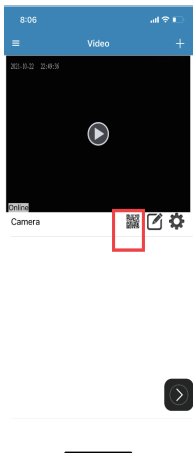

## The steps that your family share your device.

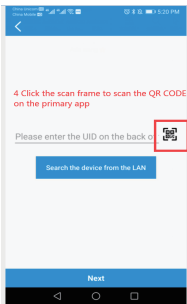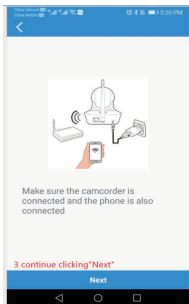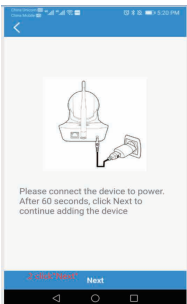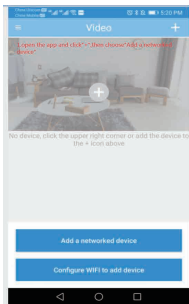    

 The sharing of the device with a new user was successfully after receiving the following picture.

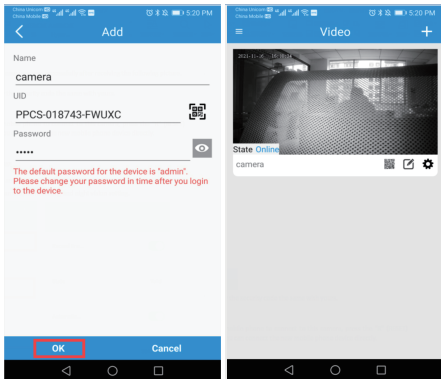

Note: The sharer needs to modify the security code the same with yours.


**⚠** If you want to use another mobile phone to connect to this camera, press the “R” (RESET) button first. After the reset, you can connect the new mobile phone device directly.


## Basic camera setup & settings

  
You can do a simple basic camera setup or access all the settings by clicking on the icon.


You can enable recording of the camera, alarm setting.


**Note: This camera has no night vision function!**

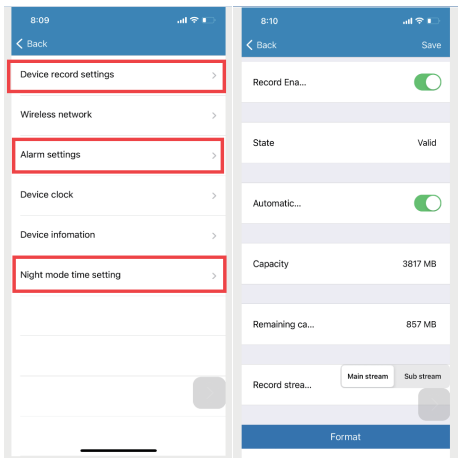

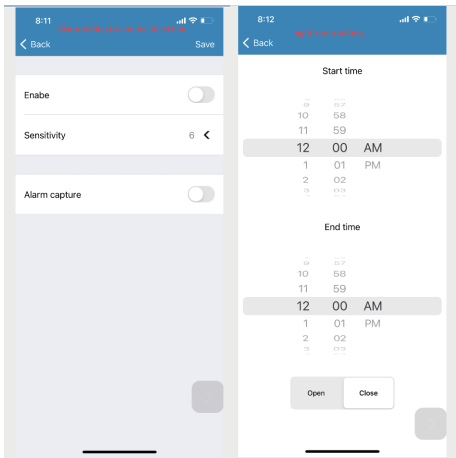

 You can modify its name and delete the camera (= unbind the device from your account) by clicking on the  icon.

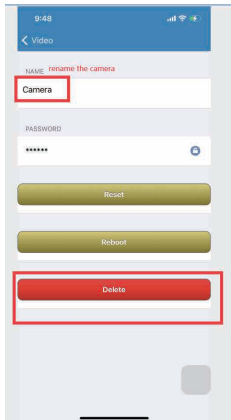

 You had better modify the password of the camera. The default password is admin.





Any way,if you forget the password after you change it,you can reset the camera firstly and connect it once again.









## The live view screen of the camera

Click on the picture of your camera in the eccam Home menu to enter the live view

The live view screen will be your device's menu. Most of the important features you can find here.

Features & Settings	
	<p><b>SNAPSHOT</b></p> <p>Take manually a photo. The recordings can be viewed in  "image" at the bottom of the main interface.</p>
	<p><b>RECORD</b></p> <p>You can manually record a video with this feature.</p> <p>The recordings can be viewed in  "image" at the bottom of the main interface.</p> <p><b>Note:</b> The automatic recording data is saved on the local SD memory card!</p>

	<p><b>MUTE</b></p> <p>Turn On/Off the live view video audio.</p>
	<p><b>RESOLUTION</b></p> <p>You can switch from low (2K) to high resolution (4K).</p>
	<p><b>ADJUSTING VIEW ANGLE</b></p> <p>Use the left or right arrow on the screen to change the view angle (Max. 160°).</p>
	<p><b>SETTINGS</b></p>
	<p>Manually turn on/off night vision</p>
	<p><b>FULL-SCREEN VIEW</b></p> <p>Enter or leave the full-screen view.</p>

## Caring for the product

- Do Not Apply Strong Impacts to the camera. The product may malfunction if subjected to strong shock or vibrations.
- Avoid Sudden Changes in Temperature.
- The camera is for indoor use only.
- Keep Away from Strong Magnetic Fields. Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Doing so could result in loss of data or camera malfunction.
- Turn the product off before removing or disconnecting the power source or memory card. Do not remove the battery while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or damage to product memory or internal circuitry.

# Battery

## Battery storage and handling

- The camera contains sensitive components, including the battery. Avoid exposing your camera and battery to very cold or very hot temperatures. Low or high-temperature conditions may temporarily shorten the battery life or cause the camera to temporarily stop working properly. Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera.
- Do not turn on your camera if it is wet. If your camera is already on, turn it off and remove the battery immediately. Allow the camera to dry thoroughly before using it again. Do not dry the camera or battery with an external heat source such as a microwave oven or hairdryer. Damage to the camera or battery caused by contact with liquid is not covered under the warranty.
- Do not store your battery with metal objects, such as coins, keys, or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.

## Battery disposal

Most rechargeable lithium-ion batteries are classified as non-hazardous waste and are safe for disposal in the normal municipal waste stream.

Many localities have laws in place requiring battery recycling. Check your local laws to make sure that you can dispose of rechargeable batteries in your regular trash. To safely dispose of lithium-ion batteries, protect terminals from exposure to other metal with packing, masking, or electrical tape so they do not cause a fire while being transported.

**WARNING:** Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, or incinerate or the camera. Do not insert foreign objects into the battery opening of the camera. Do not use the camera or the battery if it has been damaged—for example, if cracked, punctured, or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

# Warranty

We offer you a 12-month guarantee without risk. If you have any questions when using our product you can contact us at any time by email. We will not hesitate to provide you with customer support.

Within 30 days after purchase, we will support the unconditional refund. However, in the case of a convenient return by the customer the return shipping charges will be borne by the customer.

## LIMITS OF WARRANTY

This warranty does not cover negligent use or misuse of the product, use with an improper voltage or current, and use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than us.

Further, the warranty does not cover "Acts of God," such as fire, flood, hurricanes, or tornadoes.

We will not be liable for any loss, damage, incidental or consequential damages of any kind arising in connection with the sale, use, operation, inoperability, malfunction, or repair of this product.

This warranty does not cover any product that:

- a) has been subject to misuse or neglect.
- b) has been used in a manner inconsistent with the warning and instructions contained in the owner's manual.

## WARRANTY RETURN POLICY

**Warning:** Opening this product for any reason voids the warranty. There are no user-serviceable parts in the case.

If service is required, at first, please send an email to us. To assist us in serving you, please have the model number and date of purchase available. We will not hesitate to provide you with customer support.

We reserve the right to make changes at any time, without notice or obligation, in colors, specifications, accessories, materials, and models.

## **If you are satisfied with this product**

As we all know, the voice of the customer is a very good reference for other buyers.

If you can publish the real experience, then leave your comments and suggestions on Amazon's product display page, for other buyers. Even a word will be very informative, and we will be very grateful for it.

---